

# QUICK START GUIDE

BLAXTAIR ORIGIN®

MR120



MR120A



Blaxtair  
Documentation

**1**

**1** GNSS IoT

**2** Rear Front

**3** 12-24Vdc 12-24Vdc 12-24Vdc

**4** 10-32 Vdc

**5** MON+ MON-

**Only included in specific packs**  
Review the BXT Origin system datasheet for more information

x6 +

x4 +

**Recommended**

**CAN**  
CAN H CAN L

**INPUTS**  
IN1 GND11  
IN2 GND12

**OUTPUTS**  
OUT1 GND01  
OUT2 GND02  
OUT3 GND03

**3**

**5**

**Configuration**  
550421  
Enter a password

1	2	3
4	5	6
7	8	9
←	0	→

**2**

**3**





# QUICK START GUIDE

## BLAXTAIR ORIGIN®

MR120



MR120A



Blaxtair Documentation

**4**

**Configuration**

550421

Enter your password

1	2	3
4	5	6
7	8	9
←	0	→

**5**

**Language**  
Select a language  
English

**Unit**  
Select a unit  
Meters (m)

**Date / Time**  
Adjust date and time

Year	Month	Day
2021	12	31
Hour	Min	Sec
23	59	59

Step 1/3

**6**

Select your vehicle

Compact Forklift  
Overall length: 2.5 - 3 m  
Overall width: 1 - 1.5 m

Step 2/3

**7**

REAR FRONT

2.0 x 3.0

Step 3/3

**!**

REAR FRONT

Step 3/3

**!**

REAR FRONT

Step 3/3

**i**

REAR FRONT

Step 3/3

**i**

REAR FRONT

Step 3/3

